

## ***Using the Social Hall DVD Player***

We have a DVD player connected into both the ceiling video projector and the sound system. This permits you to watch a full-length movie on a very large screen.

### **Equipment needed:**

- A DVD
- DVD player and its remote control
- Sound System
- Ceiling Projector and its remote control
- The large video screen (behind the curtains)

1. Open the curtains and drop the video screen
  - a. In the far SW corner of the S/H, there is a white toggle switch. Press it down to lower the screen and up to raise it. There is no need to hold down the switch to perform either function.
2. Operating the ceiling projector
  - a. In the S/H storeroom (NW corner), under the sound equipment, there is a grey remote control (Sharp). The black remote is for the DVD player.
  - b. Stand in front of (or under) the projector and press the On button. A green light should turn on at the bottom of the projector showing that it is powering-up.
  - c. Wait a few seconds and use the “Input” up and down arrows (top center of remote) to highlight “Video” and press enter.



3. Turn on the power to the audio system (inside the storeroom).
  - a. The power strip is on the left-hand side of the mixer/amp. Switch the power button to On. This should turn on all the audio equipment (with the exception of the DVD player).



4. Using the DVD player
  - a. The original remote control for the player was missing and was replaced by a generic remote control so not all buttons on the remote are mapped to the DVD player.
  - b. Press the power button to turn the unit on, open the drawer, insert the CD/DVD then close the drawer. The CD or DVD should start playing automatically, if not then press PLAY on the player or use the Play-key on the remote.
  - c. To pause/stop/start the video, you must stand in the storeroom's double-doors and point the remote control at the player. It requires unobstructed, line-of-sight to work properly.
  
5. Turn off the equipment
  - a. Turn off the projector
    - i. Press the Power button on the remote
    - ii. You will see a message on the screen to press the power button a 2<sup>nd</sup> time.
    - iii. Press the power button again and the unit will enter Standby mode. This mode ensures that the unit cools off sufficiently before completely turning itself off. You need do nothing more at this time.
  - b. Turn off the DVD player (remember to remove your DVD first)
  - c. Turn off audio system using the power switch on the left of the equipment.
  - d. Raise the screen and close the curtains.